



USER MANUAL

TABLE OF CONTENTS

WARNINGS AND SAFETY INFORMATION	02
PROPER USAGE	10
FCC INFORMATION	13
ASSEMBLY	14
MOVING THE STEPR	23
GROUNDING METHODS	24
EXPLODED DRAWING	25
PARTS LIST	26

IMPORTANT SAFETY INSTRUCTION!

When using the STEPR, basic precautions should always be followed, including the following:

Read all instructions before using the STEPR.

DANGER – To reduce the risk of electric shock:

- 1.** Always unplug the STEPR from the electrical outlet immediately after using and before cleaning.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1.** The STEPR should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2.** Use the STEPR only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 3.** Never operate the STEPR if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the STEPR to a service center for examination and repair.
- 4.** Keep the cord away from heated surfaces.
- 5.** Never operate the STEPR with the air openings blocked. Keep the air openings free of lint, hair, and alike items.

IMPORTANT SAFETY INSTRUCTION!

6. Never drop or insert any object into any opening.
7. Do not use outdoors.
8. Do not operate where aerosol (spray) the STEPRs are being used or where oxygen is being administered.
9. To disconnect, turn the STEPR off, then remove the plug from the outlet.
10. Connect the STEPR to a properly grounded outlet only. See grounding instructions.
11. The STEPR is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the STEPR by a person responsible for their safety. Keep children under the age of 13 away from the STEPR.
12. Do not carry the STEPR by supply cord or use cord as a handle.

SAVE THESE INSTRUCTIONS

The specifications of the STEPR may vary slightly from the illustrations and are subject to change without notice.

WARNING

Read all instructions carefully before using the STEPR. Retain this owner's manual for future reference:

There are several areas during the assembly process that special attention must be paid. It is very important to follow the assembly instructions correctly and to make sure all parts are firmly tightened. If the assembly instructions are not followed correctly, the STEPR could have parts that are not tightened and will seem loose and may cause irritating noises. To prevent damage to the STEPR, the assembly instructions must be reviewed and corrective actions should be taken.

Never operate the STEPR if it has a damaged cord or plug, if it is not working properly, if it has been damaged, or immersed in water.

When emergency happens, take away the "emergent stop button" immediately.

There is a certain risk of too fast speed, it is recommended that users do not use too fast speed directly after starting the STEPR.

Caution: Read the assembly instruction carefully, follow the instruction when assemble.

IMPORTER:
STEPR INC.
ADD: 300 Delaware Ave. Suite 210 #524
Wilmington, DE 19801
United States

ATTENTION

1. Before starting any exercise program, consult with your physician or health professional.
2. Check all the bolts locked.
3. Never put the STEPR in the wetness area, or it will cause troubles.
4. We take no responsibility for any troubles or hurts due to above reasons.
5. Dress sport clothes and shoes before running.
6. Do not do exercise in 40 minutes after meal.
7. To prevent hurts, please warm up before exercise.
8. Consult with doctor before exercise if you have high blood pressure.
9. The STEPR is only used for adults and indoor using.
10. Provide the olds, children and handicapped with good care, guide and supervision.
11. Do not plug anything into any parts of The STEPR, or it may damage.
12. Do not connect line to the middle of cable; do not lengthen cable or change the cable plug; do not put any heavy thing on cable or put the cable near the heat source; forbid using socket with several holes, these may cause fire or people may be hurt by the power.
13. Cut off the power when the STEPR is not used. When the power is cut off , do not pull the power line to keep the wire unbroken.
14. Maximum weight of user: 353lbs (160kgs).

ATTENTION

15. Pulse monitor data may not be accurate, can not be used for medicine. Over-exercise may cause injury, even death. If you have a feeling of dizziness, sickness or other abnormal symptoms, please stop training and consult a doctor immediately.
16. The class of the STEPR is: SC
17. That injuries to health may result from incorrect or excessive training.

The STEPR can be used by children aged from 14 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the STEPR in a safe way and understand the hazards involved.

CARE AND MAINTENANCE

Care and, if applicable, maintenance advice shall be provided with each piece of the equipment. The advice shall include at least:

- a. A warning notice to the effect that the safety level of the STEPR can be maintained only if it is examined regularly for damage and wear, e.g. ropes, pulleys, connection points;
- b. An advice to replace defective components immediately and/or keep the STEPR out of use until repair;
- c. Special attention to components most susceptible to wear.

IMPORTANT SAFETY PRECAUTION

- If you experience any kind of pain, including but not limited to chest pains, nausea, dizziness, or shortness of breath, stop exercising immediately and consult your physician before continuing.
- When exercising, always maintain a comfortable pace.
- Do not wear clothes that might catch on any part of the STEPR.
- Always wear athletic shoes while using the STEPR.
- Do not jump on the STEPR.
- At no time should more than one person be on the STEPR while in operation.
- The STEPR should not be used by persons weighing more than specified on this manual. Failure to comply will void the warranty.
- Disconnect all power before servicing or moving the STEPR. To clean, wipe surfaces down with soap and slightly damp cloth only; never use solvents.
- The STEPR should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- Connect the STEPR to a properly grounded outlet only.
- At NO time should children under the age of 13 or pets be within 10 feet of the STEPR.

IMPORTANT SAFETY PRECAUTION

- Keep children under the age of 13 away from this exercise the STEPR. Teenagers must be supervised at all times while using the STEPR.
- The STEPR is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the STEPR by a person responsible for their safety.
- Use the STEPR only for its intended use as described in the owner's manual.
- Do not use other attachments that are not recommended by the manufacturer. Attachments may cause injury.
- Never operate the STEPR if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or immersed in water.
- Keep power cord away from heated surfaces. Do not carry this unit by its supply cord or use the cord as a handle.
- Never operate the STEPR with the air opening blocked. Keep the air opening clean, free of lint, hair, and the like.
- To prevent electrical shock, never drop or insert any object into any opening.
- Do not operate where aerosol (spray) the STEPRs are being used or when oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- Do not use the STEPR in any location that is not temperature controlled, such as but not limited to garages, porches, pool rooms, bathrooms, car ports or outdoors. Failure to comply may void the warranty.

IMPORTANT SAFETY PRECAUTION

- Do not remove the console covers unless instructed by Customer Tech Support. Service should only be done by an authorized service technician.
- Make sure there is no less than 2*1m free space behind the STEPR.
- In case of any Abnormality during the use process, please press the emergency button and get off the STEPR after it stops.
- If you observe any damage or wear on the mains plug or on any section of the mains lead then please have these replaced immediately by a qualified electrician – do not attempt to change or repair these yourself.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If you want to dismount the STEPR, you must stop the STEPR completely.
- Indication that the free area shall be not less than 0,6 m greater than the training area in the directions from which the STEPR is accessed. The free area must also include the area for emergency dismount. Where the STEPR is positioned adjacent to each other the value of the free area may be shared. The free area and training area shall be illustrated with a dedicated figure.
- Children should be supervised to ensure that they do not play with the STEPR.

Cleaning and user maintenance shall not be made by children without supervision.

PROPER USAGE

1. As shown in the figure below, the user enters the step area of the stair trainer from the direction of the arrow, walks up the steps, and clicks the start button to start using the STEPR.



2. As shown in the figure below, after the user finishes exercising, click the stop button. After the stair trainer stops smoothly, the user exits the step area of the STEPR from the direction of the arrow.




3. If the stairs shake too much during exercise, it means that the chain is too loose. Please remove the left and right protective cover of the main frame, and use a hexagonal T-type wrench to fix the screw of the rear gear clockwise to tighten the chain as shown in Figure 1. As shown in Figure 2, when the gap between the chain and the tube is adjusted to 35mm, you can continue to use the STEPR.

FIGURE 1



FIGURE 2

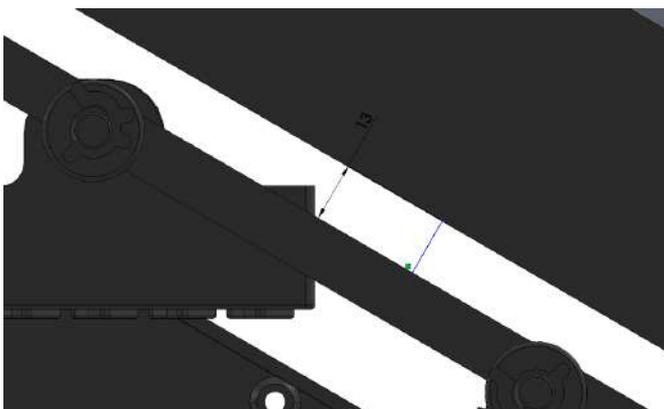

4. If the start/stop button is damaged during use, you cannot continue to use the STEPR, and you need to replace the internal electronic parts before you continue to use the STEPR.
5. The surface of stairs are plastic, which is easy to wear and tear. Please ensure that the user's soles are clean when using it.
6. There are two EMERGENCY STOP BUTTONS on the STEPR. One emergency stop button is located at the below of the handlebars and the second is located on the lower right side handlebar. The EMERGENCY STOP BUTTONS will bring the step surfaces to a complete stop when pressed.
7. Stand directly in front of the STEPR. Grasp the handlebars and step onto the STEPR until you are within comfortable reach of the console, top emergency stop lever, and in-reach handlebar controls.
8. To determine proper workout position, stand on the steps within comfortable reach of the console. Maintain a constant distance from the console and in-reach handlebar controls. Keep your knees slightly bent at all times.

FCC information to the user

1. **Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the STEPR.

2. **Note:** the STEPR has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. the STEPR generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the STEPR does cause harmful interference to radio or television reception, which can be determined by turning the STEPR off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the STEPR and receiver.
 - Connect the STEPR into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.


ASSEMBLY STEPS

Note: The floor area of this STEPR is 1175×735mm

Weight: 243lbs (110kgs)



STEP 1

1. Open the package, Remove all parts from the box on the ground.
2. Pass the Switch lower wire 2(123) through the right Decorative cover (49R) to connect with the Switch upper wire2 and switch middle wire2 (124).
3. Cover the Decorative cover (49L / R) to the Upright tube (2L / R), then lock the Upright tube (2L/R) to the Main frame (1) with six M10*20 Hex socket screws (74) and six $\phi 10 \times 1.2$ Lock washers (102).(Please don't tighten them now).

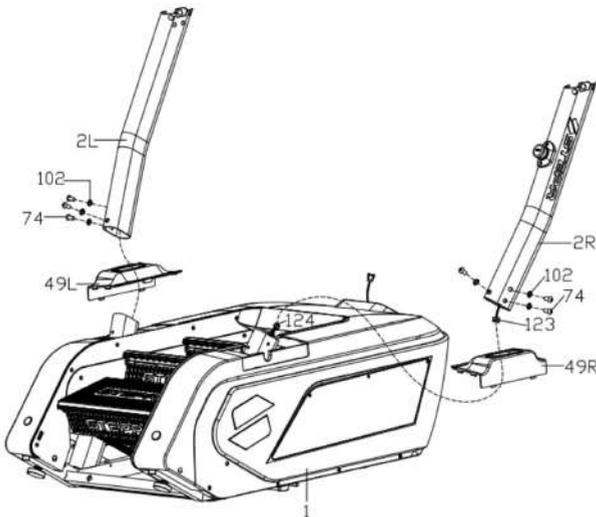


STEP 2

1. Connect the Console lower extension wire (119) of the console with the Console lower wire (120) of the console;
2. Hang the lower console post frame (5) holes 5-A/5-B on the inner hexagonal cylindrical head bolt (98), as shown below A-1, A-2, and A-3;
3. Attach the Lower console mast (5) to Main frame (1) with four M10*30 Hex socket screws (73) and four $\phi 10$ Flat washers (105). (Please don't tighten them now).

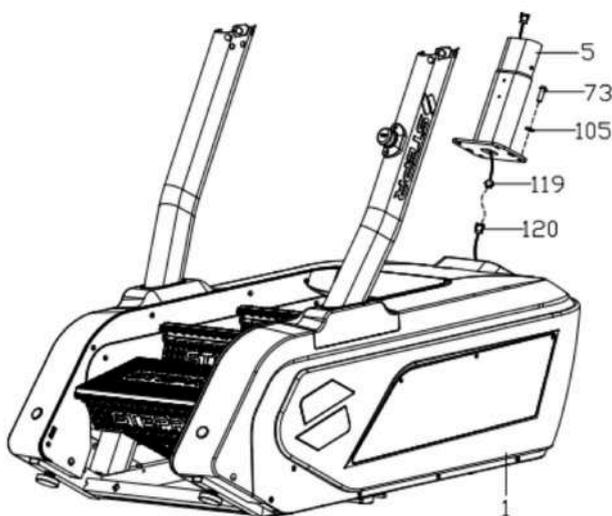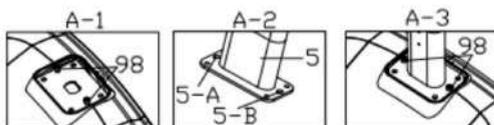


STEP 3

1. Lock the Console rear cover (35) to Upper Console mast (4) with four Cross screw M5*15 (81);
2. Insert the Console upper extension wire (118), Emergency switch lower wire 1 (122), into the corresponding port of Socket board (121) (As shown in figure C,D);
3. Lock the Computer cover adornment (36) to Console rear cover (35) with four ST4.0*16 Cross tapping screws (89).

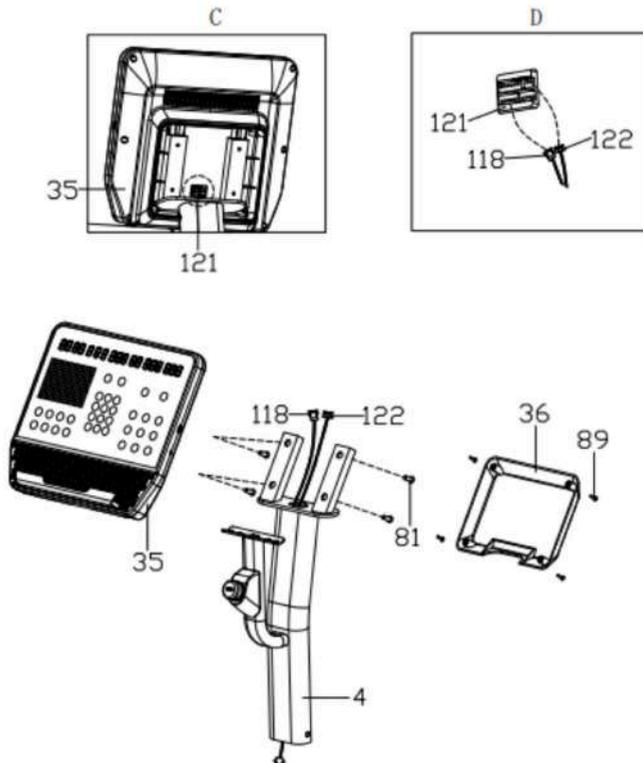


STEP 4

1. Connect the Console upper extension wire (118) to the Console lower extension wire (119);
2. Attach the Console mast (4) to the Lower Console mast (5) with four M10*20 Hex socket screws (74) and four Lock washer $\Phi 10 \times 1.2$ (102). (Please don't tighten them now).

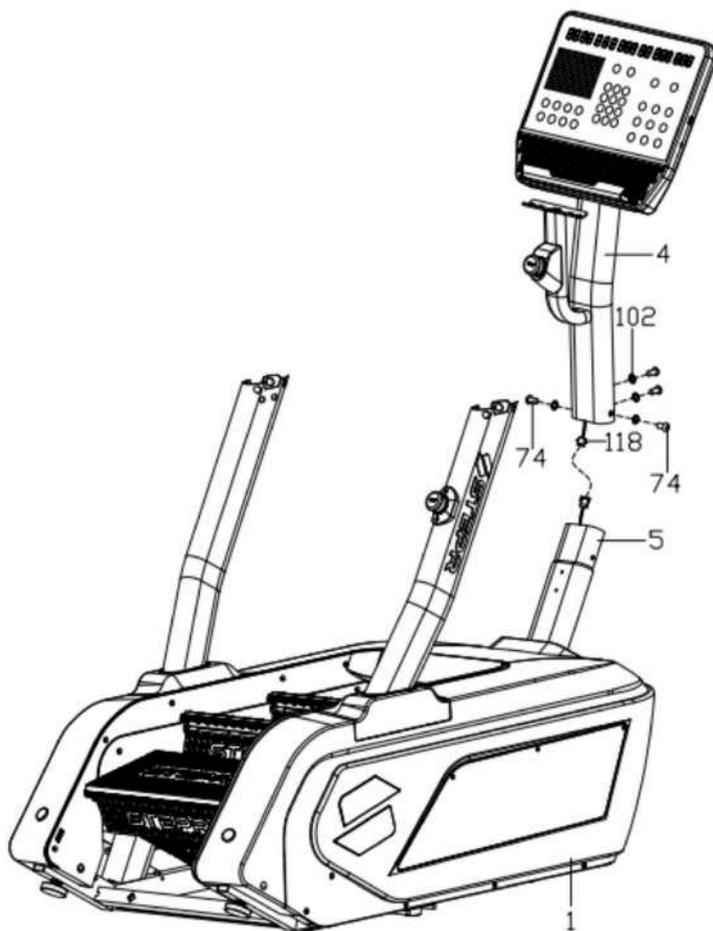

STEP 5

1. Cover the Handrails (3L/R) to the Upright tube (2L/R);
2. Align the hole of E and Upright tube left/right(2L/R) position, then press the E of the Handrails left/ right (3L/R) down to Upright tube, Attach the Handrails(3L/R) and Upright tube (2L/R) with six Hex socket screw M10*20(74) and six Lock washer $\phi 10*1.2$ (102). (Please don't tighten them now);
3. Align the Handrails (3L/R)and Upper Console mast (4) position ,then lock the Handrails (3L/R) to the fixed part of the Console mast (4) with four M8*20 Hex bolts (77) and four $\phi 8*1.2$ Lock washers (103).

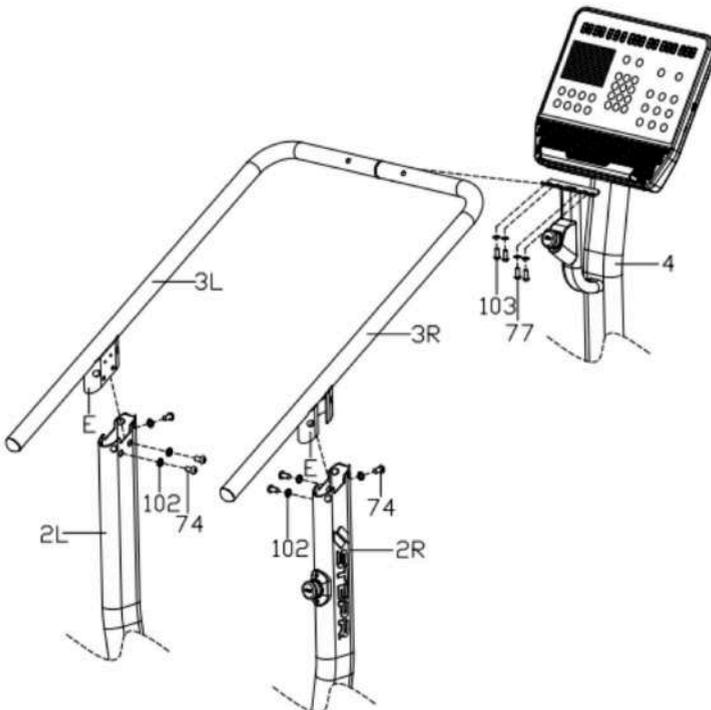


STEP 6

1. Lock all the sixteen M10*20 Hex socket screws (74) and the four M10*30 Hex socket screws (73) that are not locked tightly in the previous assembly steps;


2. Clip the snap joint at H of Decorative cover (49L/R) into Protective cover (44L/R), and then press the snap joint at K of Decorative cover (49L/R) to Protective cover (44L/R);

3. Put the Phone holder(133) on the middle of Handrails(3L/R),and lock the Phone holder(133) to Handrails(3L/R) with two Cross tapping screw ST4.0*16(89).

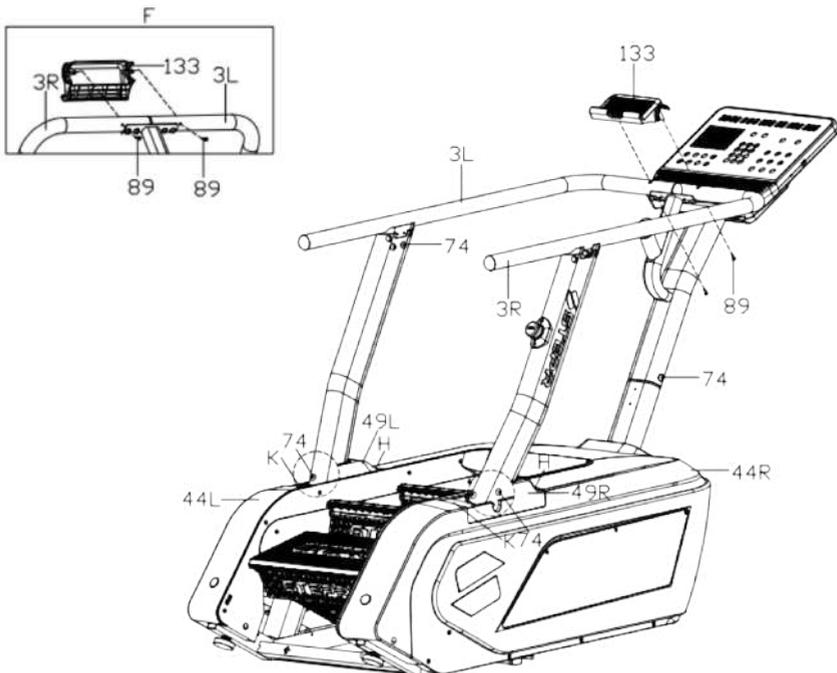


STEP 7

1. Lock the Handrails(3L/R) onto the Exterior decorative cover(41L/R) with four Cross tapping screw ST4.0*16(89);
2. Lock the Interior decorative cover (42L/R) onto the Upright tube (2L/R) with four Cross tapping screw ST4.0*16(89).

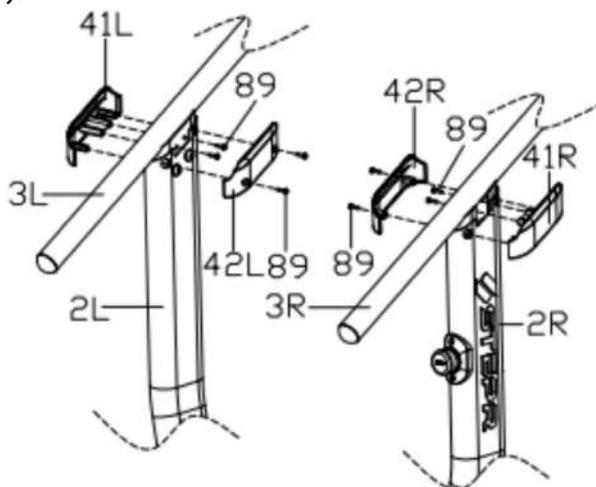


STEP 8

1. Lock the Bottle/Phone Holder (40) onto the Lower Console mast (5) with two Hex socket cap screw M6*25 (79);
2. Put the Console mast decorative cover (55) apart with hands and then cover it into the Lower Console mast (5).

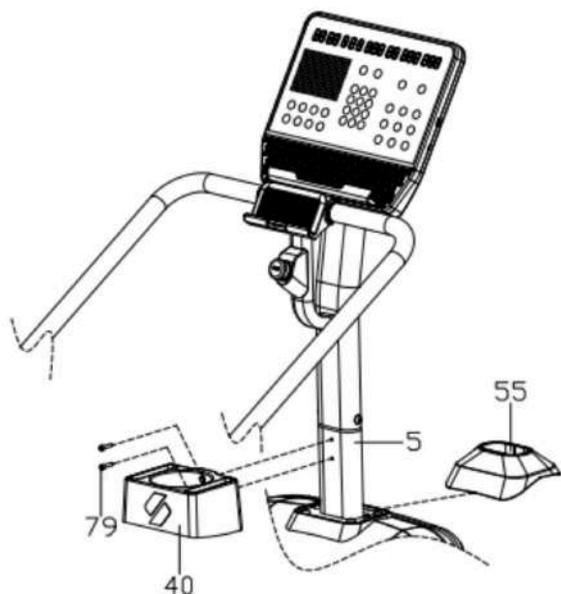


STEP 9

1. Use 2pcs M10*65 hex cylindrical head bolts (70), 2pcs D10 arc wash (54), 2pcs M10 cap screws (57) to fix the strengthens base frame (7) on the base frame (6) (Please don't tighten them now).

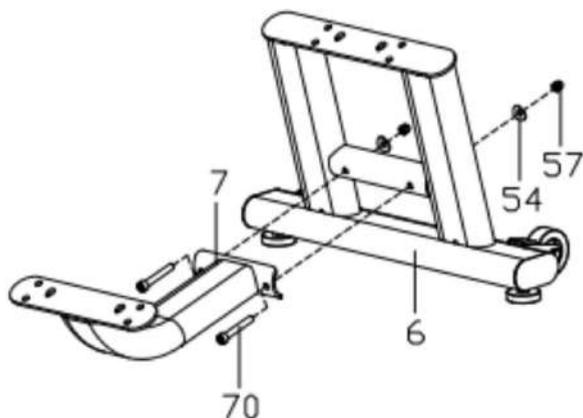

STEP 10


1. First, put up the main frame(1) then button up the base frame (6), and the fixed block L &M of the strengthens base frame (7) on the main frame (1) with 4pcs hexagonal cylindrical head bolts (98);
2. Lock the base frame (6) and strengthens base frame(7) on the main frame(1) tightly with 4pcs M10*20 hex head bolts (74) and 4pcs $\Phi 10$ inner serrated lock washers (102);
3. Lock the 2pcs M10*65 hexagonal cylindrical head bolts (70) that were pre- locked.

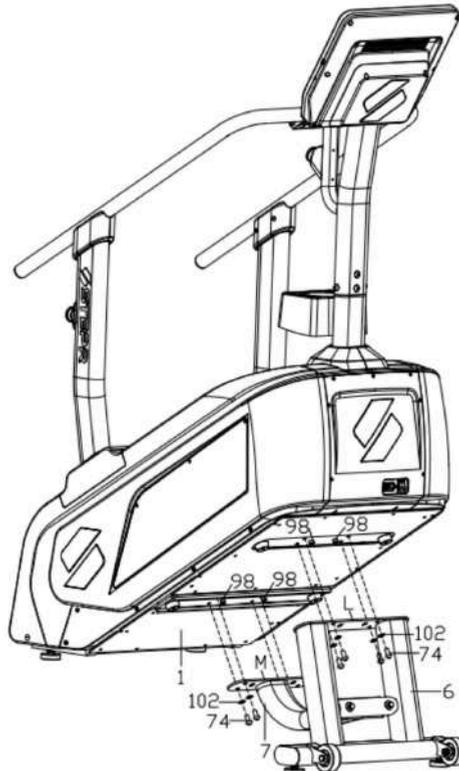

MOVING THE STEPR

Screw the two Transport handle (131) into the main frame (1), after the completion of moving STEPR, and screw the Transport handles (131) out and put them away for use next time.

WARNING: the STEPR is heavy, use care and additional help if necessary when moving. Failure to follow these instructions could result in injury.

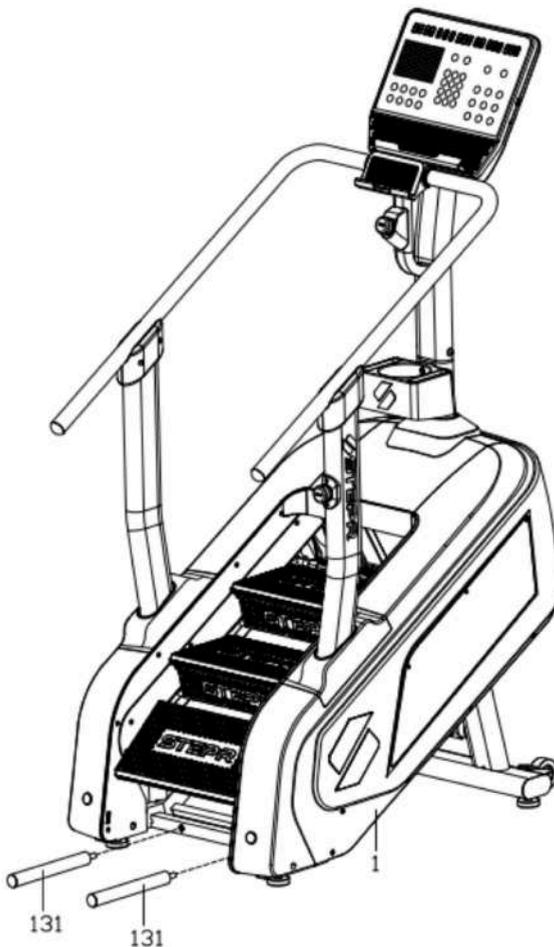

GROUNDING METHODS

The STEPR must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.


The STEPR is equipped with a cord having an the STEPR-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER – Improper connection of the STEPR-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the the STEPR is properly grounded.


Do not modify the plug provided with the the STEPR – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

The STEPR is for use on a nominal 110-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A in following figure. Make sure that the the STEPR is connected to an outlet having the same configuration as the plug.

No adapter should be used with the STEPR.

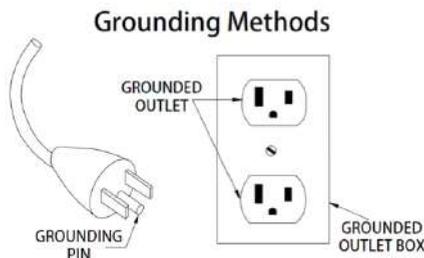

EXPLODED DRAWING

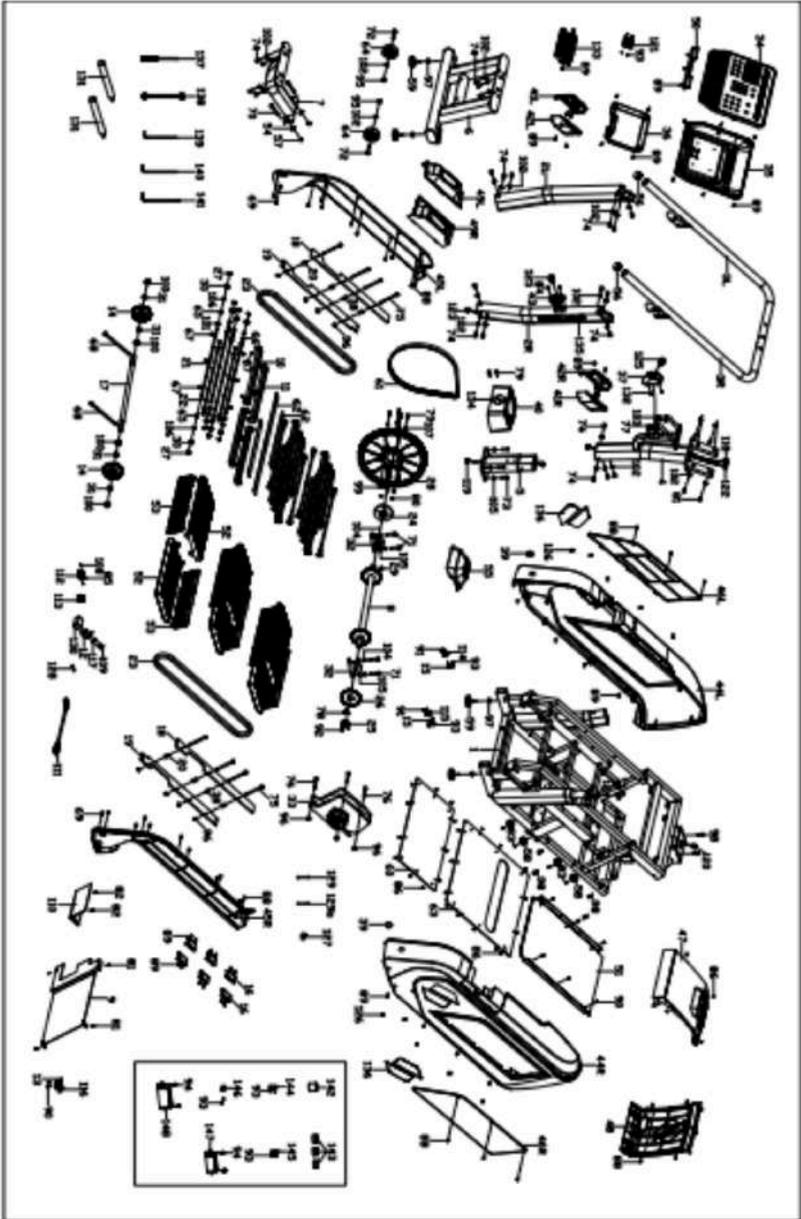

PARTS LIST

Part No.	Description	Qty	Part No.	Description	Qty
1	Main frame	1	34	LED Computer upper cover	1
2L	Upright tube-Left	1	35	Computer rear cover	1
2R	Upright tube-Right	1	36	Computer rear cover adornment	1
3L	Handrails-Left	1	37	Switch base 1	1
3R	Handrails-Right	1	38	Support sleeve 2	2
4	Upper Console mast	1	39	Hole plug	2
5	Lower Console mast	1	40	Bottle/Phone Holder	1
6	Base frame	1	41L	Handle outer cover-Left	1
7	Strengthens base frame	1	41R	Handle outer cover-Right	1
8	Front roller	1	42L	Handle inner cover-Left	1
9	Baffle	1	42R	Handle inner cover-Right	1
10	Stair support 1	6	43	Switch base 2	1
11	Stair support 2	6	44L	Protective cover-Left	1
12	Switch fastener	1	44R	Protective cover-Right	1
13	Light sensor bracket	1	45L	Inner protective cover-Left	1
14	Rear gear	2	45R	Inner protective cover-Right	1
15	Infrared fastener	2	46L	Exterior protective cover-Left	1
16	Cover fixing	6	46R	Exterior protective cover-Right	1
17	Rear roller shaft	1	47	Upper protective cover	1
18	Guide	2	48	Rear protective cover	1
19	Guide2	2	49L	Decorative cover-Left	1
20	Support sleeve 1	6	49R	Decorative cover-Right	1
21	Bearing connecting shaft	12	50	Phone holder 2	1
22	Stair connecting shaft	6	51	Middle baffle	1
23	Chain	2	52	Stair 1	6
24	Pulley shaft sleeve	1	53	Stair 2	6
25	Emergency stop plate sleeve	1	54	Arc washer D10	2
26	Emergency stop plate	1	55	Console mast decorative cover	1
27	Clip	24	56	End cap of handrail	2
28	Belt pulley	1	57	Nut M10	2
29	Flat key 1	1	58	Flat foot pad	4
30	Bearing 608Z	24	59	Adjustable foot pad	4
31	Bearing 6004	4	60	Bottom baffle	1
32	KP005 pedestal bearing	2	61	Belt	1
33	Brake combination	1	62	EVA silencing pad	12
63	Bottom baffle 2	1	101	E-type snap ring Φ7	18
64	Roller	2	102	Lock washer Φ10	26
65	Stair spacer 1	12	103	Lock washer Φ8	4
66	Stair spacer 2	12	104	Spring washer Φ10	4
67	Wear washer	30	105	Flat washer Φ10	8
68	Hex socket cap screw M10*170	2	106	Flat washer Φ8	24
69	Cross countersunk tapping screw ST5.0*25	2	107	Flat washer Φ6	4
70	Hex socket cap bolt M10*65	2	108	Hex nut M3	2
71	Hex socket cap bolt M10*35	4	109	Cross screw M4*40	2

PARTS LIST

72	Hex bolt M10*45	2	110	Controller	1
73	Hex socket screw M10*30	4	111	Power cord	1
74	Hex socket screw M10*20	24	112	Switch	1
75	Hex socket cap screw M8*110	8	113	Power socket	1
76	Hex socket cap screw M8*75	3	114	Infrared emitter	1
77	Hex bolt M8*20	4	115	infrared receiver	1
78	Slotted flat point set screw M4*5	3	116	Photoelectric sensor 1	1
79	Hex socket cap screw M6*25	6	117	Flat washer D4	2
80	Slotted flat point set screw M5*10	3	118	Console upper wire	1
81	Cross screw M5*15	8	119	Console middle wire	1
82	Cross screw M4*15	2	120	Console lower wire	1
83	Crosstapping head screw M6*15	4	121	Socket board	1
84	Cross countersunk head screw M4*15	2	122	Emergency switch wire 1	1
85	Cross countersunk head screw M3*15	2	123	Emergency switch lower wire 2	1
86	Cross tapping screw ST4.0*12	30	124	Emergency switch upper wire 2+Emergency switch middle wire 2	1
87	Cross tapping screw ST4.0*10	24	125	Emergency stop	2
88	Cross countersunk tapping screw ST4.0*16	33	126	Plastic hole cap 10*8.0	10
89	Cross tapping screw ST4.0*16	39	127	Photoelectric sensor 2	1
90	Cross screw M4*10	8	128	Fuse	1
91	Cross screw M3*15	4	129	The wire connecting the driver to the electro magnet	1
92	Cross screw M3*8	3	129b	The wire connecting the driver to the brake disc	1
93	Cross tapping screw ST2.9*9.5	40	130	Distance sensor	1
94	Cross screw M4*8	14	131	Transport handle	2
95	Nylon nut M10	2	132	Cross tapping screw ST4.0*8	2
96	Nylon nut M8	11	133	Phone holder 1	1
97	Hex thin nut M10*5	4	134	Small S logo on bottle(optional)	1
98	Hex socket cap screw M8*250	6	135	STEPR logo on upright post (optional)	2
99	Nylon nut M6	4	136	Big S logo	2
100	Outer snap ring Φ 20	4	137	Cross screwdriver	1
138	S17 Wrench	1	144	Type-C charge port (optional)	1
139	Allen wrench S5	1	145	USB port/Headphone jack(optional)	1
140	Allen wrench S6	1	146	USB port(optional)	1
141	Allen wrench S8	1	147	Filter(optional)	1
143	Magnetic ring 2 (optional)	3	148	inductance filter (optional)	1



© STEPR 2024, | STEPR, INC. All rights reserved.

getstepr.com